


Read all instructions carefully. If you have any questions about installing TruckLok, please call our helpline on 0845 644 4704. Connections to the vehicle should be soldered and insulated carefully.

1. Remove tailgate cover




2. Remove nut

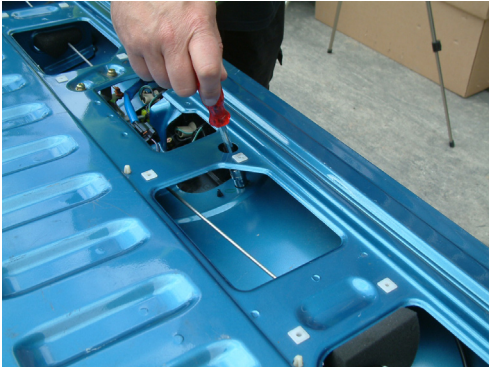

3. Remove nut



4. Slide bracket into tailgate

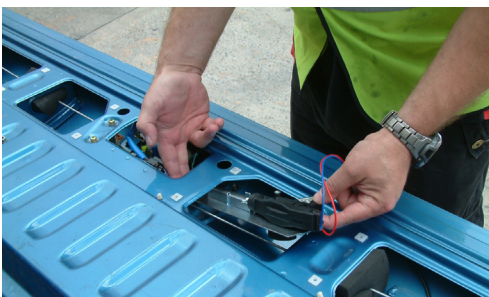

5. Slide bracket into tailgate over studs



6. Replace both nuts




7. Remove cable cover



8. Feed cable through grommet



9. Connect actuator to loom and use cable tie/clip to secure cable.

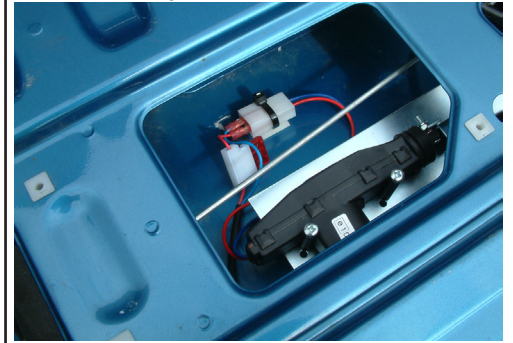


11. Run the cable along the chassis, taking care to ensure it is kept away from heat sources.

12. Bring the cable through the grommet located under the passenger seat.

13. Remove the door sill trim from the passenger side front door.

14. Connect the wires as follows.

TruckLok	Vehicle
Red	Blue/Black Trace
Blue	Blue/Purple Trace

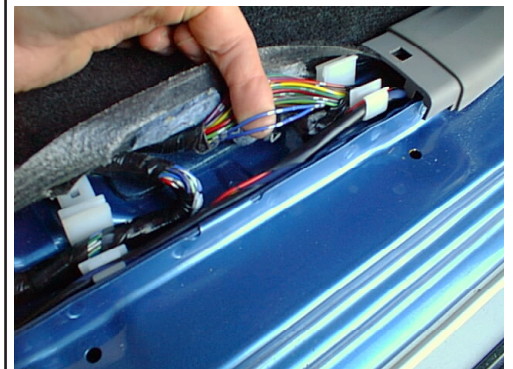

15. **Close all doors** and test using vehicle's key. Do not test repeatedly as the actuator may overheat.

16. Replace all trim and tailgate cover.

Installation notes: The L200, like all new vehicles is fitted with a security device which ensures that doors are not unlocked mistakenly. If doors are unlocked and not opened within 20 secs, they will lock themselves. TruckLok does not over-ride this feature. The tailgate may lock itself if no cab doors are opened after unlocking.